

User Manual for the CR:511E Acoustic Calibrator



This manual, the software to which it relates, the program code and drawings are all:

© Copyright Cirrus Research plc 1989-2012

The content of this manual, any illustrations, technical information and descriptions within this document were correct at the time of going to print. Cirrus Research plc reserves the right to make any changes necessary, without notice, in line with the policy of continuing product development and improvement.

No part of this publication may be duplicated, reprinted, stored in a data processing system or transmitted by electronic, mechanical, photographic or other means, or recorded, translated, edited, abridged or expanded without the prior written consent of Cirrus Research plc.

No liability is accepted for any inaccuracies or omissions in this manual, although due care has been taken to ensure that it is complete and accurate as possible.

Accessories supplied by Cirrus Research plc have been designed for use with the instrumentation manufactured by Cirrus Research plc. No responsibility is accepted for damage caused by the use of any other parts or accessories.

In order to take account of a policy of continual development, Cirrus Research plc reserves the right to change any of the information contained in this publication without prior notice.

Produced by Cirrus Research plc, Acoustic House, Bridlington Road, Hunmanby, North Yorkshire, YO14 0PH, United Kingdom.

© Copyright Cirrus Research plc 2012

Reference Number 12/04/CR: 511E/01

Document Printing Date Thursday, 16 February 2012

Overview	4
Operation	5
Calibrating a Sound Level Meter	5
Changing the Battery	7
Battery type	7
Performance Information.	8
Variation with Temperature.	8
Barometric Pressure Correction for CR: 511E.	8
Specification.	9
Appendix 1 – Free Field Correction	10
Microphone Correction Values.....	10
Example	10
CE Certificate of Conformity	11
Equipment Description	11
Warranty Information.	12
Cirrus Research Offices	13

Overview

Accurate calibration of Sound Level Meters and Sound Measurement equipment is essential before and after each measurement to ensure the validity of any values recorded. The CR:511E Acoustic Calibrator provides a cost effective yet accurate means of achieving this requirement.

The CR:511E unit can be used for all microphones suitable for this kind of calibration. It has the ability to accept different cavity adaptors. The CR:511E has a nominal cavity diameter of 1.125 inches. A standard QC:3 adaptor allows the unit to be used with a ½ inch microphone. Other adaptors are available. The approval by the German test office PTB is valid for the 1/2 inch adaptor.

The CR:511E provides two reference levels of 94dB(1 Pa) and 104 dB (3.16 Pa). It is therefore possible to judge the linearity of the instrument and to calibrate at high background noises.

The frequency is 1000 Hz, therefore the frequency weighting of the instrument has no influence on the accuracy of the calibration.

The CR:511E Acoustic Calibrator meets the requirements of IEC 942, it corresponds to type 1L, which means, it is type 1 if the correction values for the air pressure are observed.

Operation

The CR:511E acoustic calibrator has provision for the calibration of a variety of microphones of various diameters. The nominal cavity has a diameter of 1.125 inches. A standard QC:3 adaptor allows the unit to be used with a ½ inch microphone. Other adaptors are available for 1 inch, 1/4 inches, 20 mm and 10 mm.

The CR:511E unit is supplied with one adaptor as standard. Typically this is the QC:3 adaptor for ½" microphones. The sound pressure generated by the calibrators are 94dB and 104dB.

However, when calibrating a microphone which is to be used for free field measurements, a small correction may be necessary to compensate for the difference between the microphone's free field response at 'zero degrees' or 'head-on' incidence and the pressure level generated by the calibrator. The correction is typically -0.3dB for ½ inch microphones (making the effective calibration level 93.7dB).

A second correction is required if the barometric pressure is not 1013 hPa.

A table shows the correction values for the standard microphones of Cirrus Research plc

In order to adapt different microphones to the CR:511E at the accuracy stated the adaptors available from Cirrus Research plc should be used. For half inch microphones the type Q3 is available, with this adaptor the calibrator can be certified officially.

Calibrating a Sound Level Meter

Ensure that the batteries in both the calibrator and the Sound Level Meter are in good condition. Do not attempt to calibrate the Sound Level Meter if battery levels are low.

Push the microphone of the Sound Level Meter, with the appropriate adaptor if required, into the cavity at the end of the calibrator. Ensure the microphone is fully inserted into the cavity and is past the 'O' ring seal. The microphone should be parallel to the body of the calibrator.

Turn on the calibrator and select the reference level required. In most situations, this will be 94dB, although the CR:511E units provide an additional 104dB reference level. Check which level the Sound Level Meter is set to accept during calibration. Most modern Sound Level Meters have electronic calibration with the level adjusted automatically.

Adjust the Sound Level Meter to the correct level where applicable. There are several factors to be considered when correcting the value generated the calibrator. These are:

1. A correction for the type of microphone capsule.
2. A correction for any changes in barometric pressure from 1013mBar (1013 hPa).

In most situations, the Sound Level Meter will be fitted with a free field microphone. The correction required for the specific microphone fitted to the Sound Level Meter will be given in the operation manual for that instrument. However, the MK:215 and

MK:224 microphone capsules which are fitted to the majority of Cirrus Research Sound Level Meters have a correction of -0.3dB when used with the CR: 511E.

The CR:511E Acoustic Calibrator is designed to be used mainly with ½" Microphone Capsules. Calibration corrections are listed below for the Cirrus Research plc ½" Capsules and two microphone capsules commonly used in test labs:

Microphone Type	Calibration Correction	Effective Calibration Level
MK: 202	-0.3dB	93.7 dB
MK: 215	-0.3dB	93.7 dB
MK: 216	-0.3dB	93.7 dB
MK: 226	-0.3dB	93.7 dB
MK: 224	-0.3dB	93.7 dB
B&K 4134	0dB	94.0 dB
B&K 4180	0dB	94.0 dB

Example

An example of the procedure used to calculate the value required is shown below:

Level = 94.0dB + Microphone Correction + Barometric/Altitude Correction

Level = 94.0dB + (-0.3dB) + Correction for 700mBar

Level = 94.0dB + (-0.3dB) + (-0.8dB)

Level = 92.9dB

Different microphones will have different correction values. Also, the use of different calibrator adaptors may alter the final values required. Please check the operation manual for the Sound Level Meter or microphone concerned for details.

Changing the Battery

The CR:511E acoustic calibrator uses a single 9v battery. This type of battery is known as 6F22 or NEDA 1604. It is also commonly known as PP3.

1. Put a small rod, usually a screwdriver, through the two holes in the end cap and gently pull the cap from the body.
2. Pull out the end plate which has the switch and battery holder attached.
3. The battery, type 6F22 (PP3) can now be eased out of its holder and replaced. Make SURE you check the correct polarity of the battery, which clips into the press studs on the battery holder.

Battery type

One battery type 6F22 is used. This is called NEDA 1604 in the USA and parts of Asia. It is often called 'PP3' in the UK and the old Commonwealth.

The battery should preferably be an alkaline battery, not an ordinary dry cell. Whilst an ordinary cell is adequate for operation, the low price of long life batteries makes their use sensible.

A long life battery is not only more efficient, but is less prone to leak and damage the calibrator. The material of the end ring and cavity is easily eaten away by battery leakage. The battery is 9 volts when new and will operate the calibrator down to about 6 volts.

Performance Information.

Variation with Temperature.

The acoustic outputs of the CR:511E Acoustic Calibrator will alter with changes in temperature. The tolerances shown below are for reference conditions of 1013mBar (1013 hPa) and 65% Relative Humidity.


Class	Temperature Range	Tolerances
Class 1L	+5°C to +35°C	± 0.3dB

Barometric Pressure Correction for CR:511E.

The variation due to static pressure may be up to 0.7 dB from the nominal value and therefore, the static pressure must be known in order to make this correction. This figure can be obtained e.g. from your local airport.

However, if measurements are required to the highest accuracy, a barometer should be purchased. The CR:590 Barometer is available for use with the CR:511E Acoustic Calibrator.

CR:511E Barometric Pressure Correction

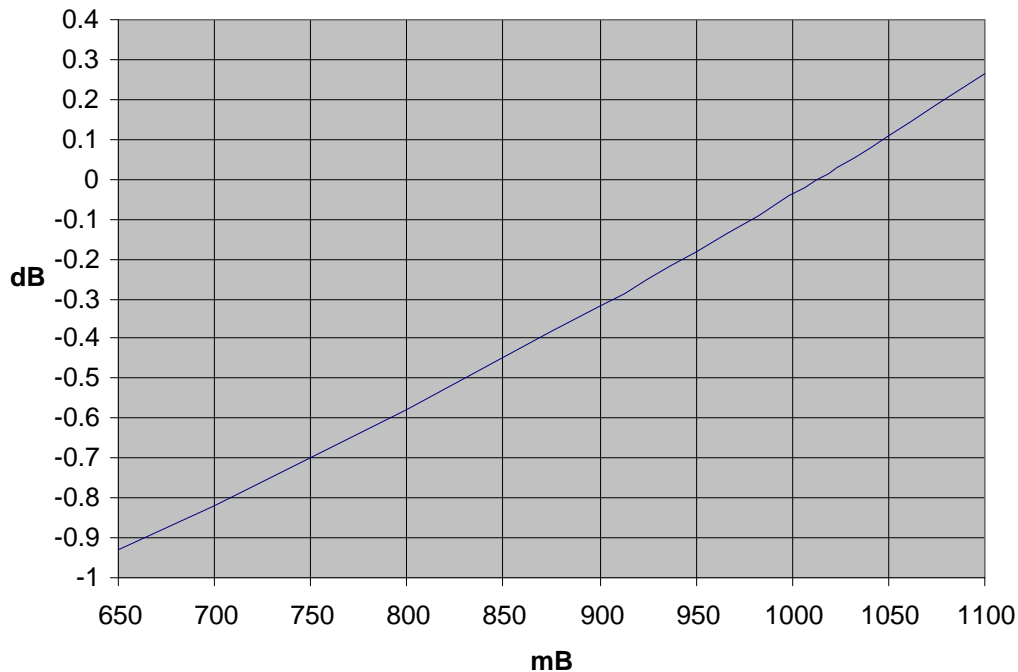

Specification.

Frequency	1kHz \pm 1.5%
Sound Level	94dB & 104dB re 20 μ Pa
Level Accuracy	\pm 0.3dB at 23 C and 101.3kPa
Standardisation	IEC 942 Class 1L
Distortion	Less than 2%
Variation with Temperature	To IEC 942 Class 1L
Variation with Barometric Pressure	See Curves or CR: 590 barometer
Operating humidity	10 to 90% rel.hum.
Operating Temperature	-10°C to +50°C
Storing temperature	-20°C to +60°C
Long Term Drift	Better than \pm 0.1dB
Effective Volume	40 cm ³
Cavity Diameter	1.125 inch with Q3 Adaptor for ½" Microphones
Battery	1 x 9v 6F22 (Neda 1604)
Weight with battery	220g
Dimensions	135mm x 48mm

Appendix 1 – Free Field Correction

When calibrating a microphone which is to be used for free field measurements, a small correction may be necessary to compensate for the difference between the microphone's free field response at 'zero degrees' or 'head-on' incidence and the pressure level generated by the calibrator.

The correction is typically -0.3dB for ½ inch microphones (making the effective calibration level 93.7dB).

The table below shows the correction values for the standard microphones of Cirrus Research plc.

Calibration corrections are listed below for the Cirrus Research plc ½" Capsules and three microphone capsules commonly used in Calibration Laboratories:

Microphone Correction Values

Microphone Type	Calibration Correction	Effective Calibration Level
MK:202	-0.3dB	93.7 dB
MK:215	-0.3dB	93.7 dB
MK:216	-0.3dB	93.7 dB
MK:226	-0.3dB	93.7 dB
MK:224	-0.3dB	93.7 dB
B&K 4134	0dB	94.0 dB
B&K 4180	0dB	94.0 dB
B&K 4192	0dB	94.0 dB

Example

An example of the procedure used to calculate the value for an MK:224 microphone is shown below :

Level = 94.0dB + Microphone Correction

Level = 94.0dB + (-0.3dB)

Level = 93.7dB

Different microphones will have different correction values. Please check the operation manual for the Sound Level Meter or microphone concerned for details.

CE Certificate of Conformity

Cirrus Research plc Hunmanby UK CE Certificate of Conformity



Manufacturer: Cirrus Research plc
Acoustic House, Bridlington Road
Hunmanby, North Yorkshire, YO14 0PH
United Kingdom
Telephone +44 1723 891655

Equipment Description

The following equipment manufactured after 1st January 2007:

CR: 511E Acoustic Calibrator

Along with their standard accessories

According to EMC Directives 89/336/EEC and 93/98/EEC

meet the following standards

EN 61000-6-3 (2001)

EMC : Generic emission standard for residential, commercial and light industrial environments.

EN 61000-6-1 (2001)

EMC : Generic immunity standard for residential, commercial and light industrial environments.

Signed

Dated 1st January 2010

A handwritten signature in black ink, appearing to be 'S. O'Rourke', written in a cursive style.

S. O'Rourke
Director

Warranty Information.

1. This document is a summary of the full warranty document and explains the Cirrus Research plc warranty in ordinary English; not in legal or complex terms.
 2. The warranty covers any acoustic instrument such as a sound level meter, acoustic calibrator, real time acoustic analyser or personal sound exposure meter (dosemeter) manufactured by Cirrus Research plc after 1st September 2011.
 3. The warranty covers all faults on the instrument except the microphone for the period defined in para (4) below, including minor accidental damage except to the microphone.
 4. The period of the warranty is 2 (two) years or 104 weeks from the date of purchase as a new instrument from Cirrus Research plc or their formally approved distributors OR 130 weeks from the date the instrument passed its final manufacturing inspection at Cirrus Research plc - whichever is the shorter.
 5. Any rechargeable battery only has the battery manufacturer's one year warranty however there will be a reduced charge for replacing rechargeable batteries during the annual "Routine Verification" process. (Commonly referred to as "Annual Recalibration")
 6. No warranty is offered for used equipment unless a special arrangement is made and a written confirmation of the warranty is given by Cirrus Research plc.
 7. On completion of the routine verification by Cirrus Research plc, the instrument will automatically be given an additional free one year warranty.
 8. There will be a charge for this routine verification and the price is published in the Service Price List.
 9. The customer is responsible for all shipping, duty and other charges relating to the servicing and calibration of the instruments.
 10. It follows that should the instrument be routinely verified by Cirrus Research plc every year, the warranty is effectively continuous to a maximum of 15 (fifteen) years from the date of purchase.
 11. Cirrus Research endeavour to ensure stocks of instrument components for the full fifteen year period but do not guarantee to do so as certain components do become obsolete or discontinued.
 12. If a sub-component becomes obsolete and stocks are depleted then Cirrus Research will endeavour to facilitate a repair but will not offer the same length guarantee.
 13. In the event of any dispute on the terms of the warranty Cirrus Research plc will accept pendulum arbitration by the United Kingdom Institute of Acoustics Ltd.
 14. The warranty does not in any way reduce any legal right of the buyer or user of the sound level meter; it is in addition to all legal rights determined by the European Union.
-

Cirrus Research Offices

The addresses given below are the Cirrus Research plc offices. Cirrus Research plc also have approved distributors and agents in many countries worldwide. For details of your local representative, please contact Cirrus Research plc at the address below. Contact details for Cirrus Research authorised distributors and agents are also available from the Internet Web site at the address shown below.

Main Office

Cirrus Research plc
Acoustic House
Bridlington Road
Hunmanby
North Yorkshire
United Kingdom
YO14 0PH

Telephone: +44 (0)1723 891655
Fax: +44 (0)1723 891742
E-mail: sales@cirrusresearch.co.uk
Web Site: www.cirrusresearch.co.uk

Germany

Cirrus Research Dresden
Karl-Marx-Str. 11a
01109 Dresden
Germany

Telephone: (+49) 351 316 0950
Fax: (+49) 351 316 0949
E-mail: vertrieb@cirrusresearch.de
Website: www.cirrusresearch.de

France

Cirrus France Ltd
40 Bis Avenue Gabriel Faure
09500 Mirepoix
France

Tel: +33 5 61 67 40 01
Fax: +33 5 61 67 40 56
Email: sales@cirrusresearch.fr
Web: www.cirrusresearch.fr

Cirrus Environmental

Unit 2 Bridlington Road Industrial Estate
Hunmanby
North Yorkshire
YO14 0PH
United Kingdom

Tel: +44 (0) 1723 891722
Email: sales@cirrus-environmental.com
Web: www.cirrus-environmental.com
